



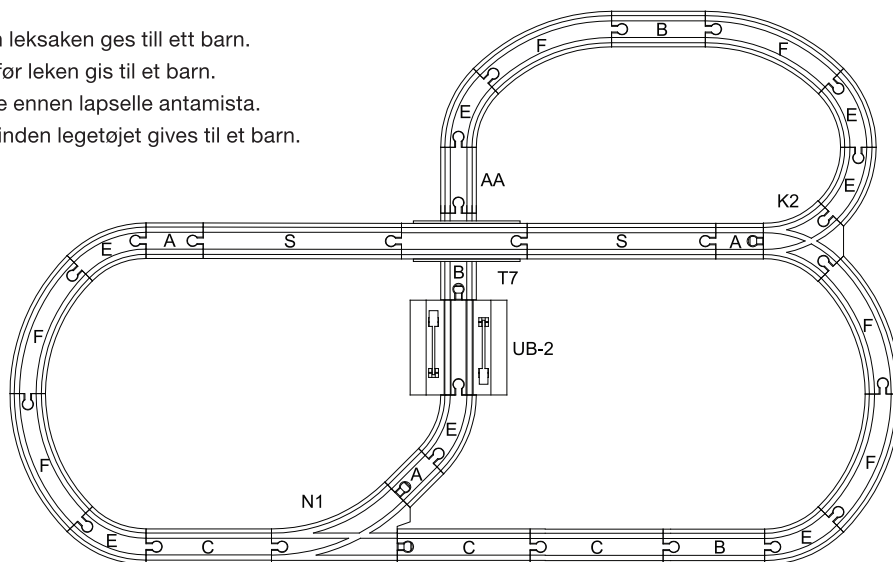 
TÅGBANA I TRÄ TOGBANE I TRE PUINEN JUNARATA TOGBANE AF TRÆ

SE - Monteras av vuxen innan leksaken ges till ett barn.

NO - Monteres av en voksen før leken gis til et barn.

FI - Aikuisen on koottava tuote ennen lapselle antamista.

DK - Monteres af en voksen, inden legetøjet gives til et barn.




Delar/Deler/Osat/Deler




FX-12F

 4 x



1 x

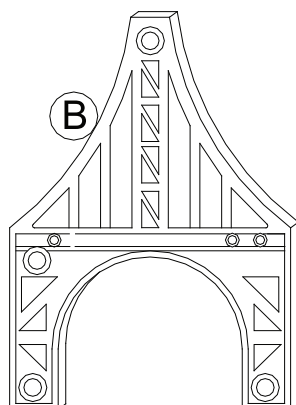 A




B

2 x

1

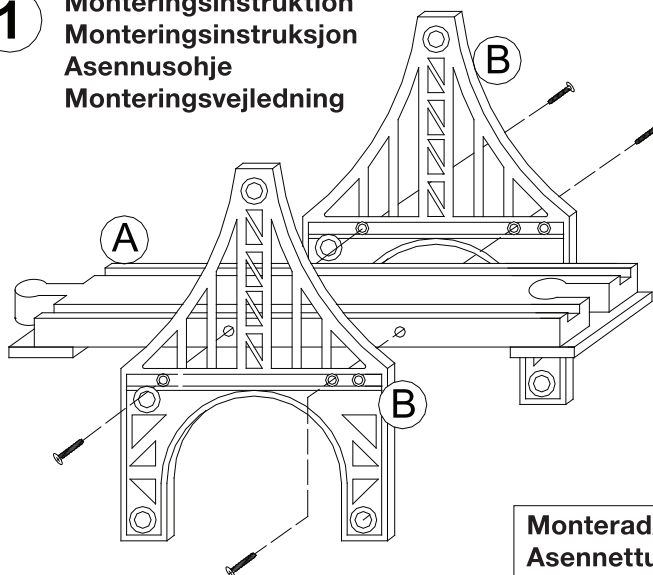 Monteringsinstruktion Monteringsinstruksjon Asennusohje Monteringsvejledning




SE - Ska monteras av en vuxen person.

NO - Må monteres av en voksen.


FI - Tuotteen kokoamiseen tarvitaan aikuinen.

DK - Skal monteres af en voksen.

























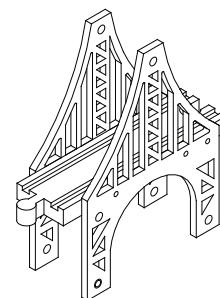 
Monterad/Montert Asennettu/Monteret



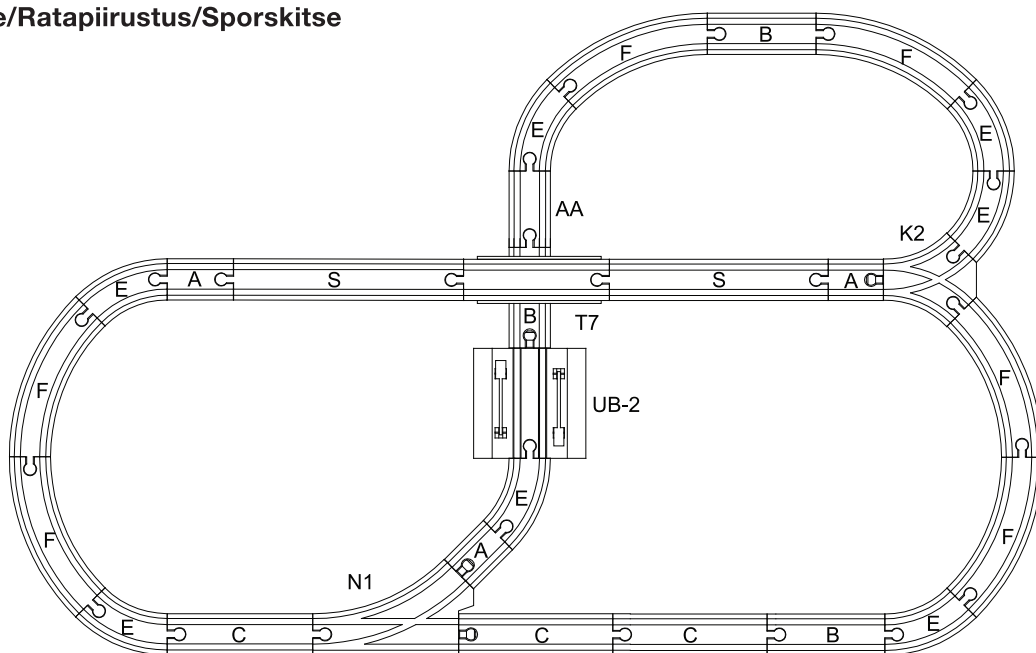 Spårskiss/Sporskisse/Ratapiirustus/Sporskitse



Delar/Deler/Osat/Deler

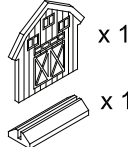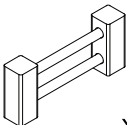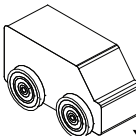                         A	AA	B	C	E	F	K2
						
x 3	x 1	x 3	x 3	x 7	x 6	x 1
N1	S	T7	UB-2	101N1	101N2	
						
x 1	x 2	x 1	x 1	x 1	x 1	x 1
101N3	101N4	101N5	101N6	102	103	104
						
x 1	x 1	x 1	x 1	x 5	x 1	x 2
105	108B	108D	108F	108H	113C1	118A2
						
x 1	x 1	x 1	x 1	x 1	x 4	x 1
118A16	317A1	363A1	364A1	370A1	507B1	518A1
						
x 1	x 1 x 1 = 2	x 2	x 2	x 1	x 1	x 1
538A1	731A3	804B	804C	732A3	841A	844A1
						
x 1	x 1	x 1	x 1	x 1	x 1	x 1